



# SUGGESTED MOUNTING FOR

# STARDUSTER® LUMINAIRES

## Series C1 Shell Lite

### STANDARD MOUNTING CHAIN

- 1) Remove the outer hex nut and washer from both sides of the luminaire.
- 2) Attach the mounting hardware and chain assembly to the threaded stud utilizing the smaller hole diameter.
- 3) Slide washer over the threaded stud and up against the mounting hardware. Thread one hex nut (removed in step #1) up to lock washer, tighten and secure the hex nut to 15-18 foot pounds max torque.
- 4) Repeat steps #2 and #3 for the opposite side of the luminaire.
- 5) Follow Steps #1-6 in Mounting Strap instructions.
- 6) Make all necessary wiring connections.


STANDARD CHAIN



### M7 – MOUNTING STRAP AND CHAIN


- 1) Using one side of the “S” hook & chain assembly attach and secure to desired location (additional hardware may be required)
- 2) Repeat step #1 for opposite side.
- 3) Lift and support luminaire into approximate location.
- 4) Route remaining (2) “S” hooks located on the chain assembly through the large mounting hole affixed to the mounting strap mounted on the luminaire.
- 5) Close the open ends of the “S” hooks.
- 6) Make all necessary wiring connections.

MOUNTING STRAP & CHAIN (M7)

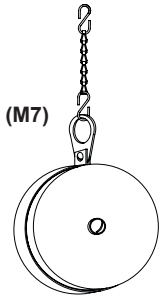

### M9 – WALL MOUNTING BRACKET


- 1) Mount and Secure wall mounting bracket to desired location.
- 2) Remove outer hex nut from the threaded stud located on both ends of luminaire.
- 3) Lift, support, and route threaded studs of luminaire into slotted hole(s) of all mounted bracket.
- 4) Thread hex nut (removed in step #2) over threaded stud tighten and secure the hex nut up to wall mounting bracket with 15-18 foot pounds max torque.
- 5) Make all necessary wiring connections.

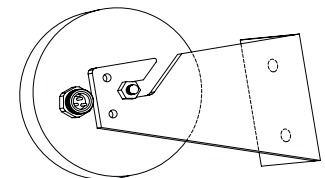

WALL MOUNTING BRACKET (M9)

### M10 – CLAMP ON WALL MOUNTING BRACKET


- 1) Anchor and secure wall mounting brackets in desired location.
- 2) Release clamp on bracket latch and open brackets.
- 3) Slide luminaire through hanger straps, hook and close bracket latches.
- 4) Make all necessary wiring connections.

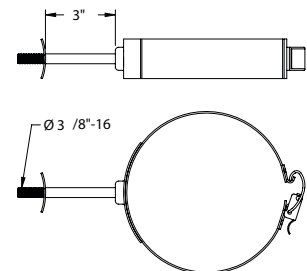

WALL MOUNTING BRACKET (M10)

### M11 – CLAMP ON CABLE MOUNTING BRACKET

- 1) Route cable through hole located at the top of the cable mounting bracket, and securely anchor cable.
- 2) Release clamp on bracket latch and open brackets.
- 3) Slide luminaire through hanger straps, hook and close bracket latches.
- 4) Make all necessary wiring connections.

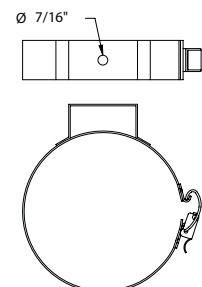

CABLE MOUNTING BRACKET (M11)

**Cleaning Instructions:** Wipe Luminaire with a soft cloth slightly dampened with warm, soapy water. On stainless steel units, tightly adhering deposits may be removed by using a stainless steel polishing powder. Never use steel wool or steel brushes on stainless steel. Always rub in the direction of the polish lines.

**Note:** All luminaires to be installed by a qualified electrician.  
Mounting and electrical hardware not supplied by Paramount Industries unless otherwise noted.