


PMTR7, Transit Series — INSTALLATION INSTRUCTIONS

CAUTION: BEFORE CONNECTING THE LUMINAIRE TO A POWER SUPPLY, MAKE SURE THE POWER IS SWITCHED OFF.

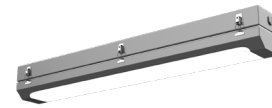

PARAMOUNT
INDUSTRIAL LIGHTING

www.paramountlighting.com
3609 Swenson Ave.
St. Charles, IL 60174

GENERAL:

1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
4. The thermally insulating material is not allowed to cover the luminaire.
5. All luminaires to be installed by a qualified electrician.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.



INSTALLATION:

1. To access the interior of the luminaire, use a T10 Security Torx Bit to remove the security screws located on the hinges of the luminaire. **FIG 1.**
2. Release the latch of the luminaire, the top hood will pop open.

NOTE: Due to the forces on the gasket, it is advised to use a flathead screwdriver to gently flip the latch open.

3. Use a phillips head screwdriver to remove the screws holding the gear tray within the luminaire. **Note:** There is a safety lanyard attached to the tray. Unclip the lanyard at this time. Remove the gear tray. **FIG 2.**

DETAILED ILLUSTRATION

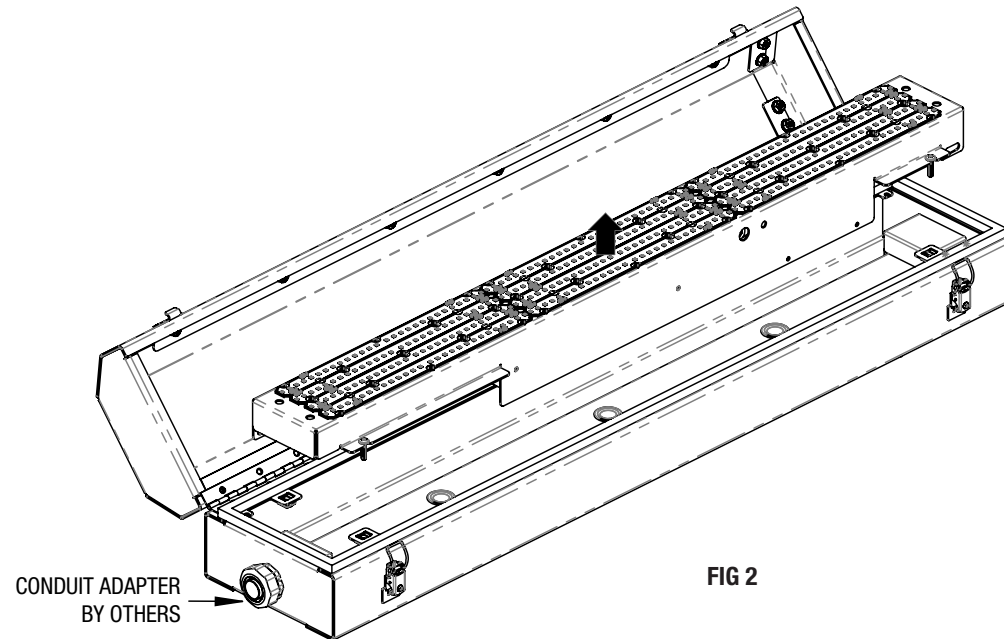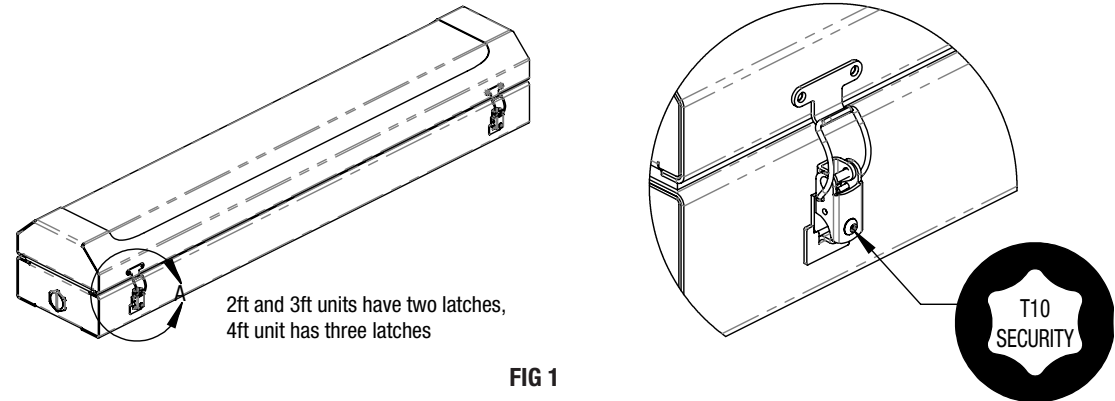


PMTR7ii

TG-DM-082726

PMTR7, Transit Series — INSTALLATION INSTRUCTIONS

CAUTION: BEFORE CONNECTING THE LUMINAIRE TO A POWER SUPPLY, MAKE SURE THE POWER IS SWITCHED OFF.

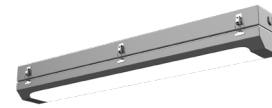

PARAMOUNT
INDUSTRIAL LIGHTING

www.paramountlighting.com
3609 Swenson Ave.
St. Charles, IL 60174

GENERAL:

1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
4. The thermally insulating material is not allowed to cover the luminaire.
5. All luminaires to be installed by a qualified electrician.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.

INSTALLATION:

4. Remove both the raceway and the sliding raceway cover using a 3/8" Hex socket tool. Remove any raceway plugs as necessary. **FIG 3.**
5. Remove either or both plugs from the end of the luminaire using a 1-5/16" Hex wrench. Attach any compatible 3/4" NPT Conduit adapters (By others). **FIG 4.**
6. Affix the luminaire to the wall using the provided #10 Sealing Washers. Fasteners by others. Consult fastener's respective installation guide as necessary. **FIG 3.**

IMPORTANT: FAILURE TO USE SEALING WASHER DURING INSTALL CAN RESULT IN WATER INGRESS.

DETAILED ILLUSTRATION

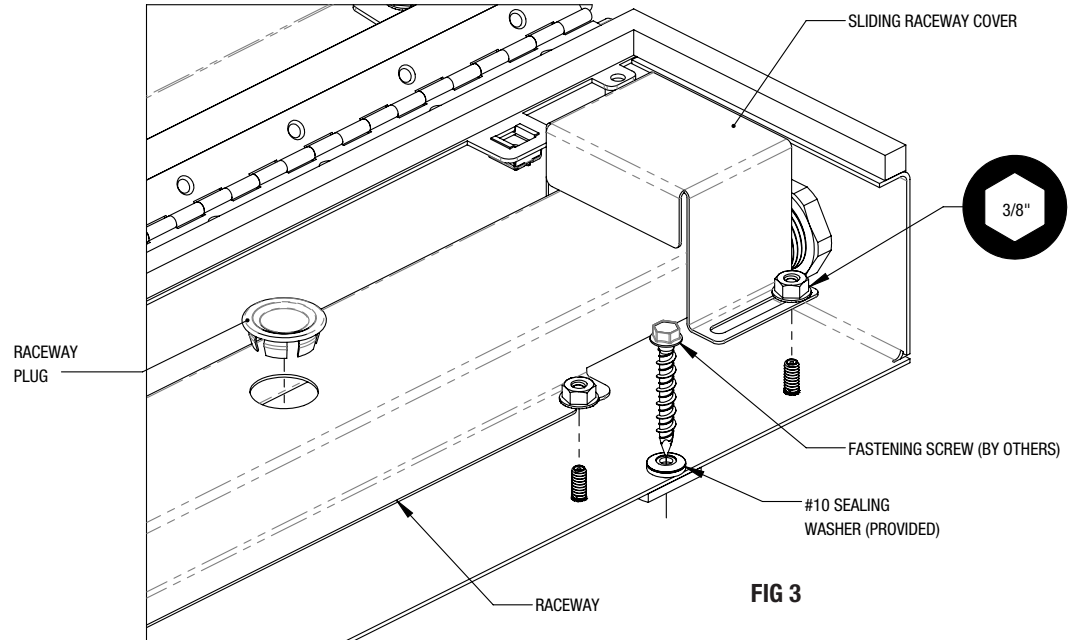


FIG 3


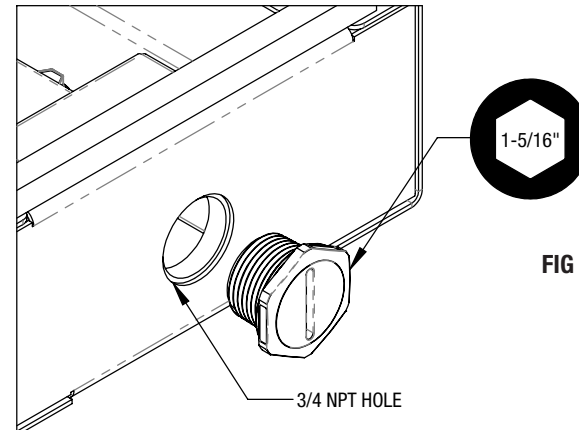


FIG 4

PMTR7, Transit Series — INSTALLATION INSTRUCTIONS

CAUTION: BEFORE CONNECTING THE LUMINAIRE TO A POWER SUPPLY, MAKE SURE THE POWER IS SWITCHED OFF.

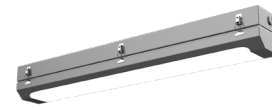

GENERAL:

1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
4. The thermally insulating material is not allowed to cover the luminaire.
5. All luminaires to be installed by a qualified electrician.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.

INSTALLATION:

7. Make any necessary conduit connection. Feed wire through housing. Re-attach raceway to the unit and make any necessary connections.

WHITE – NEUTRAL
BLACK – LINE
GREEN – GROUND
PINK – DIM-
PURPLE – DIM+

8. Re-attach the gear tray to the unit via the screws removed in Step 3. Ensure that the safety lanyard is clipped to the gear tray. **FIG 5.**

9. Firmly press down on lid and re-latch housing. **FIG 6.**

10. Fasten the Security Screws in place using a T10 SECURITY torx bit. **FIG 6.**
 - a.) Fasten to 10 IN-LBS.

WARNING: FOR 3G+ APPLICATIONS, LOCTITE 271 (BY OTHERS) MUST BE APPLIED TO SECURITY SCREWS.

DETAILED ILLUSTRATION


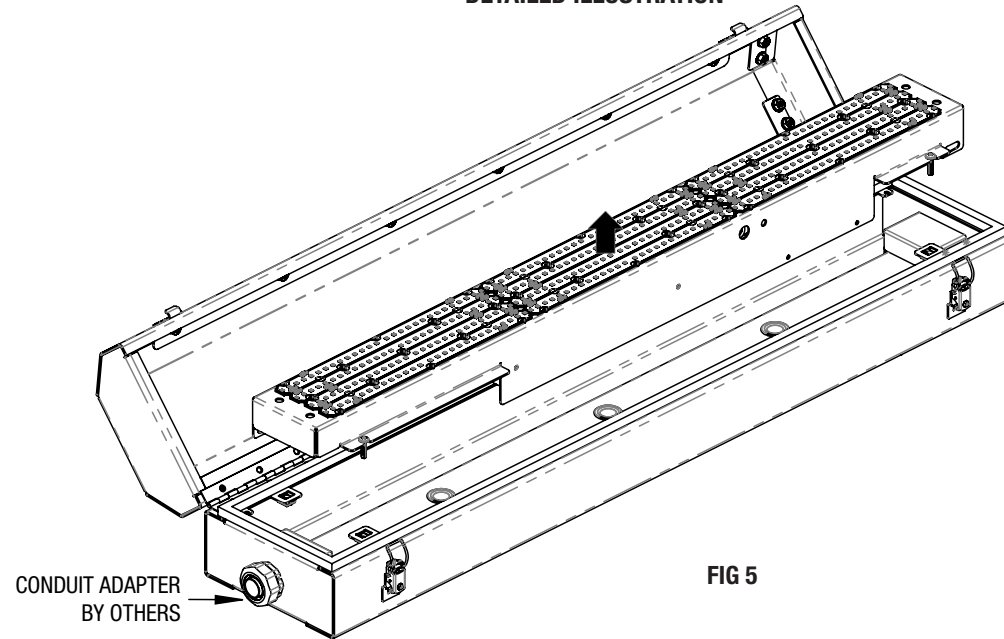


FIG 5

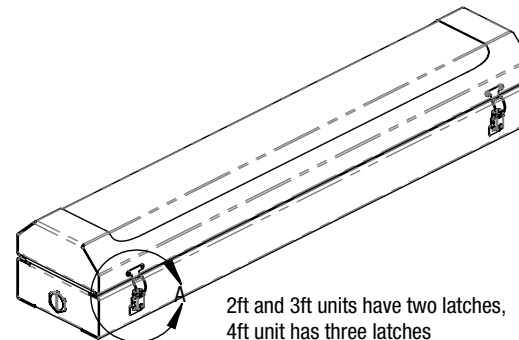

2ft and 3ft units have two latches,
4ft unit has three latches

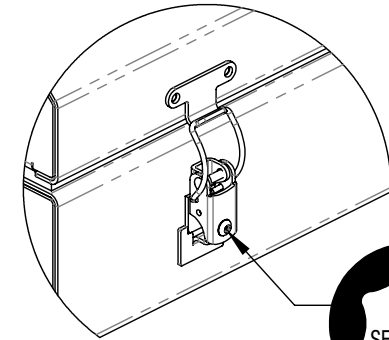


FIG 6