



SUGGESTED MOUNTING FOR TECHNISEAL TROFFERS

F0, F1, F2 (Front Access)

GENERAL:


1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
4. All luminaires to be installed by a qualified electrician.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.

INSTALLATION

FLANGE SERIES F0, F1, F2 (FRONT ACCESS)

- 1) Remove lens frame assembly by unfastening all captive screws, squeeze the (2) safety wire hinges or unclip (2) safety snells.
- 2) Remove reflector by removing (4) hex nut fasteners and disconnecting the LED array from the driver by way of quick disconnects or wire nuts and set reflector aside.
- 3) Remove the tape securing the (4) swing bars to the housing.
- 4) Place luminaire into ceiling opening and turn (4) swing bar screws clockwise, until luminaire pulls up securely to the ceiling.
- 5) Route supply wiring into fixture, make all necessary wiring connections.
- 6) Reconnect LED array to driver by way of quick disconnects or wire nuts. Reattach and secure reflector, safety wire hinges or safety snells, and lens frame assembly.

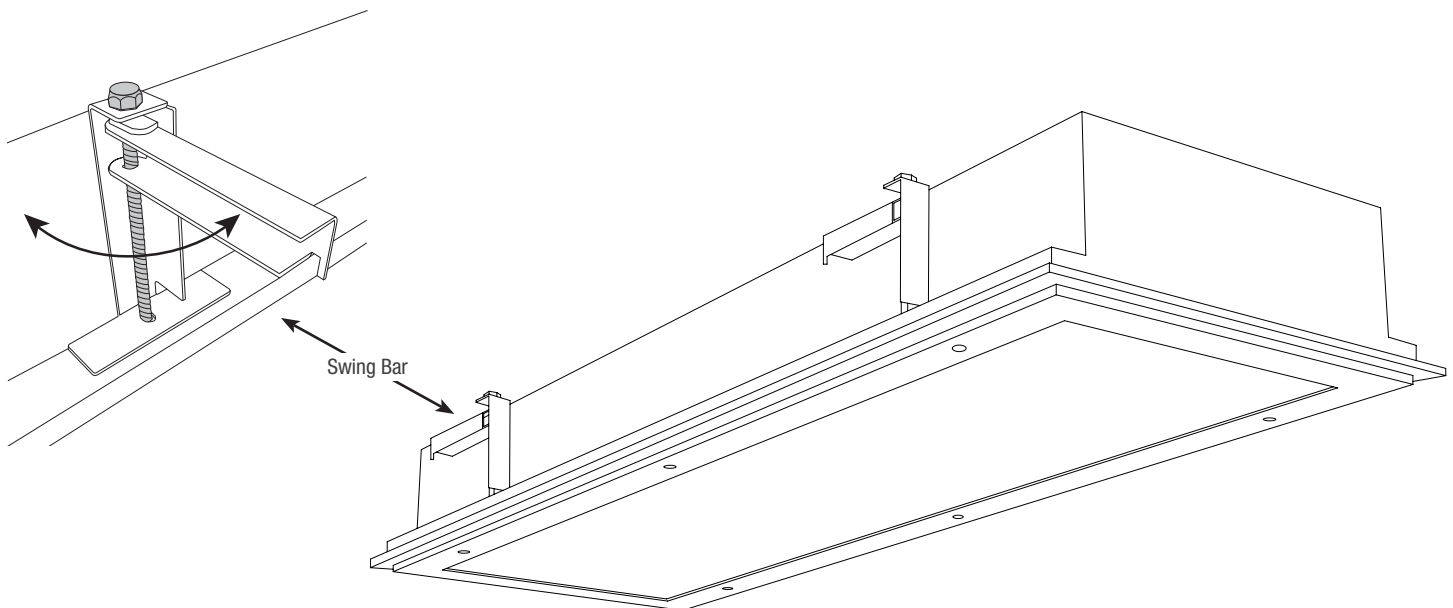

Cleaning Instructions: Wipe luminaire with a soft cloth slightly dampened with warm, soapy water. On stainless steel units, tightly adhering deposits may be removed by using a stainless steel polishing powder. Never use steel wool or steel brushes on stainless steel. Always rub in the direction of the polish lines.

Mounting and electrical hardware not supplied by Paramount Industries unless otherwise noted.

iiPMF0F1F2