

GCL13RO, Garage & Canopy Lite Series — INSTALLATION INSTRUCTIONS

CAUTION: BEFORE CONNECTING THE LUMINAIRE TO A POWER SUPPLY, MAKE SURE THE POWER IS SWITCHED OFF.



DETAILED ILLUSTRATION

Adjusting CCT and Wattage

GENERAL:

1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
4. These luminaires are intended to be mounted to a J-Box directly supported by the building structure.
5. All luminaires to be installed by a qualified electrician.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.

INSTALLATION:

1. Place the fitting face up (**Figure 1**).
2. Using a screwdriver remove the switch box screws then remove the switch box cover (**Figure 2**).
3. Remove the cap then turn off the up lighting (**Figure 3**).

IMPORTANT: Do not disassemble, modify, or drop the LED canopy light.

Figure 1

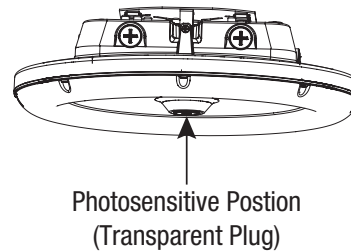


Figure 2




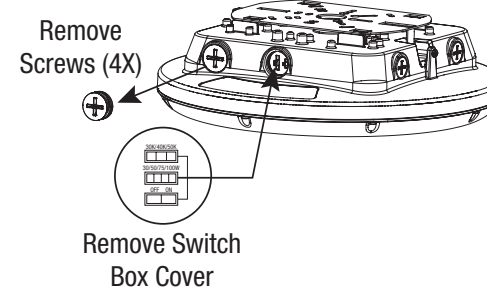


Figure 3

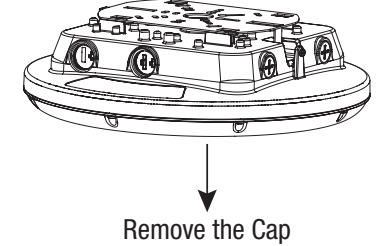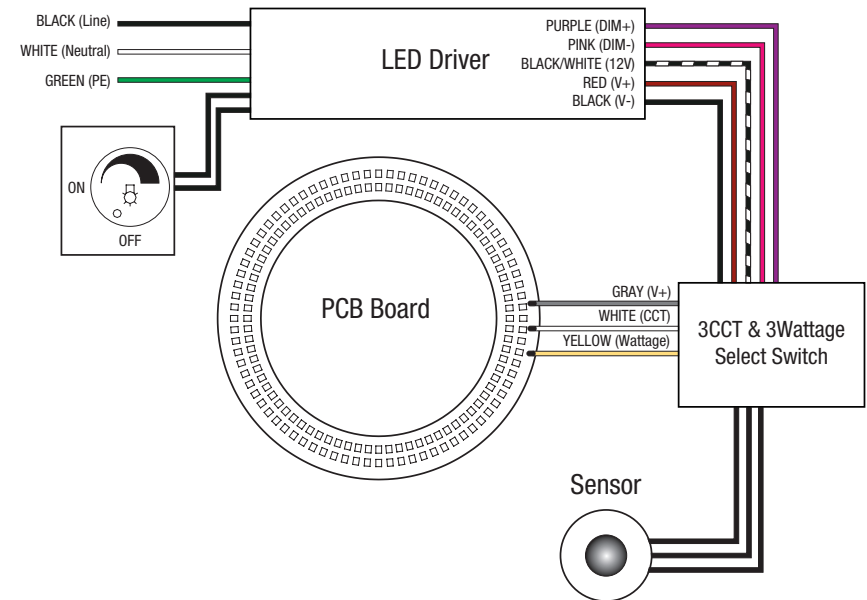

Optional Motion Sensor

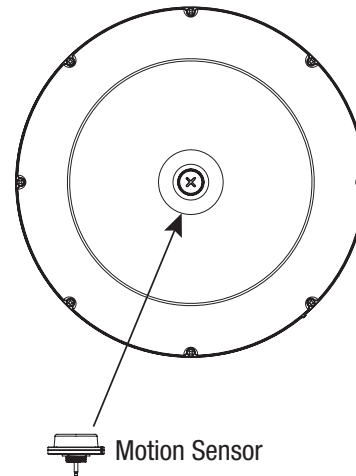

GCL13RO, Garage & Canopy Lite Series — INSTALLATION INSTRUCTIONS

CAUTION: BEFORE CONNECTING THE LUMINAIRE TO A POWER SUPPLY, MAKE SURE THE POWER IS SWITCHED OFF.

Ceiling Installation

DETAILED ILLUSTRATION



GENERAL:

1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
4. These luminaires are intended to be mounted to a J-Box directly supported by the building structure.
5. All luminaires to be installed by a qualified electrician.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.

INSTALLATION:

1. Loosen the mounting plate screw and remove the mounting plate from the luminaire (**Figure 1**).
2. Tighten the screws to attach the mounting plate to the junction box (**Figure 2**).
3. Hang the luminaire on the ring to connect the wires using terminal caps (**Figure 3**).

NOTE: Make sure the luminaire is grounded.

4. Attach the luminaire to the mounting plate (**Figure 4**).
5. Tighten the mounting plate screw (**Figure 5**).

IMPORTANT: Do not disassemble, modify, or drop the LED canopy light.

Figure 1

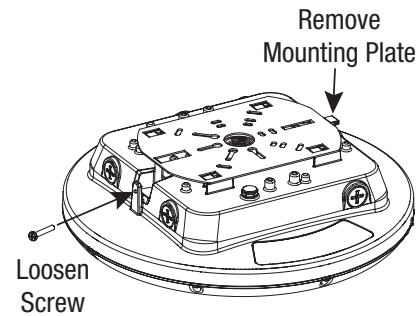


Figure 2


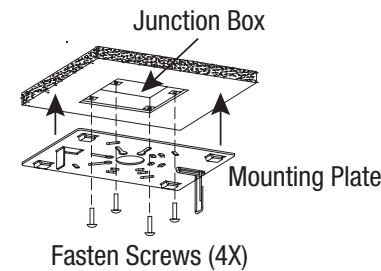


Figure 3

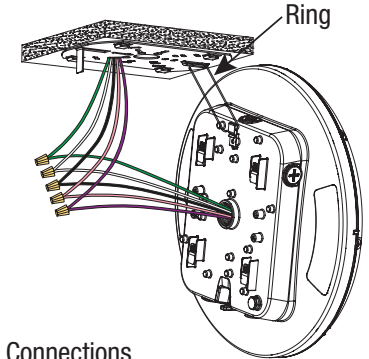

Wiring Connections

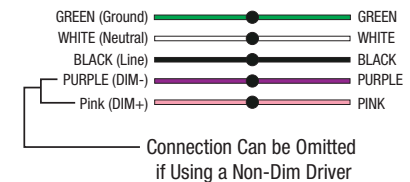


Figure 4


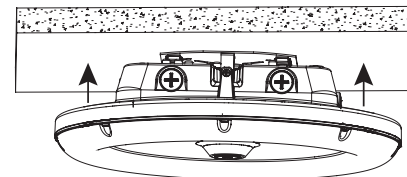


Figure 5



GCL13RO, Garage & Canopy Lite Series — INSTALLATION INSTRUCTIONS

CAUTION: BEFORE CONNECTING THE LUMINAIRE TO A POWER SUPPLY, MAKE SURE THE POWER IS SWITCHED OFF.

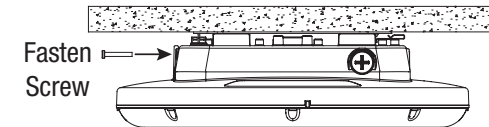

DETAILED ILLUSTRATION

Pole-Pendant Installation

GENERAL:

1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
4. These luminaires are intended to be mounted to a J-Box directly supported by the building structure.
5. All luminaires to be installed by a qualified electrician.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.

INSTALLATION:

1. Wire In-Line Wire Splices in tandem so it can feed thru pipe (**Figure 1**).

NOTE: Make sure the luminaire is grounded.

2. Apply Threadlocker (Supplied by Others) to rigid conduit threads prior to tightening.
3. Securely tighten rigid conduit until pipe bottoms out and torque MAX 50 IN-LBS prior to locking with set screw.
4. Use a 2MM Hex tool to tighten set screw to 20 IN-LBS to prevent rotation (**Figure 2**).

