

SUGGESTED MOUNTING FOR CRAFT LITE LUMINAIRES

Series CO, C2, C3, C4, C5, C6, C8, C9

GENERAL:

- 1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
- 2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
- 3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
- 4. All luminaires to be installed by a qualified electrician.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.


INSTALLATION

SF - SURFACE

- 1) Remove (1) threaded ring and (1) end cap on end opposite of wire entry. Install threaded plug into end opposite of the power entry side.
- 2) Grasp lens on open end of luminaire and remove from channel.
- 3) Remove reflector by removing (2) screws and disconnecting the LED array from the driver by way of quick disconnects or wire nuts and set reflector aside.
- 4) Mount luminaire utilizing (4) mounting holes provided and properly seal.
- 5) When end wiring this luminaire, wire must pass through the threaded ring and end cap, prior to making electrical connections.
- 6) Reconnect LED array to driver by way of quick disconnects or wire nuts. Reattach and secure reflector, lens, end cap, and threaded ring.

PM - PENDANT

- 1) Remove (1) threaded ring and (1) end cap on end opposite of wire entry. Install threaded plug into end opposite of the power entry side.
- 2) Grasp lens on open end of luminaire and remove from channel.
- 3) Remove reflector by removing (2) screws and disconnecting the LED array from the driver by way of quick disconnects or wire nuts and set reflector aside.
- 4) Install pendants to luminaire and properly seal.
- 5) Bring power supply wires through pendants to make electrical connections. (End wiring see surface mount step #5)
- 6) Reconnect LED array to driver by way of quick disconnects or wire nuts. Reattach and secure reflector, lens, end cap, and threaded ring.



Cleaning Instructions: Wipe luminaire with a soft cloth slightly dampened with warm, soapy water. On stainless steel units, tightly adhering deposits may be removed by using a stainless steel polishing powder. Never use steel wool or steel brushes on stainless steel. Always rub in the direction of the polish lines.

Mounting and electrical hardware not supplied by Paramount Industries unless otherwise noted.

iiPMC

JL-AB-032625




SUGGESTED MOUNTING FOR CRAFT LITE LUMINAIRES

Series CO, C2, C3, C4, C5, C6, C8, C9

INSTALLATION (Continued)

IN-ROW (Fixtures must be in line with each other – be sure to shim uneven surfaces)

- 1) Remove (1) threaded ring and (1) end cap on end opposite of wire entry. Install threaded plug into end opposite of the power entry side.
- 2) Grasp lens on open end of luminaire and remove from channel.
- 3) Remove reflector by removing (2) screws and disconnecting the LED array from the driver by way of quick disconnects or wire nuts and set reflector aside.
- 4) Install top (flat) half of joiner band to back of luminaire.
- 5) Mount luminaire utilizing (4) mounting holes provided and properly seal.
- 6) Install wire protecting grommet in the hole on the end of luminaire. (This must be used.)
- 7) Mount the next luminaire in the same manner but securing the (2) luminaires together first with alignment pins and supplied hex nuts. (C0 only has grommet and jointer band)
- 8) When end wiring this luminaire, wire must pass through the threaded ring and end cap, prior to making electrical connections.
- 9) Reconnect LED array to driver by way of quick disconnects or wire nuts. Reattach and secure reflector, lens, end cap, and threaded ring. Install bottom (curved) half of joiner band assembly making sure bottom half slides over top half when securing latch.
- 10) Ensure Joiner Band assembly is centered on seam between the two in row fixtures before completing the cam lock, reference completed installation drawing below.

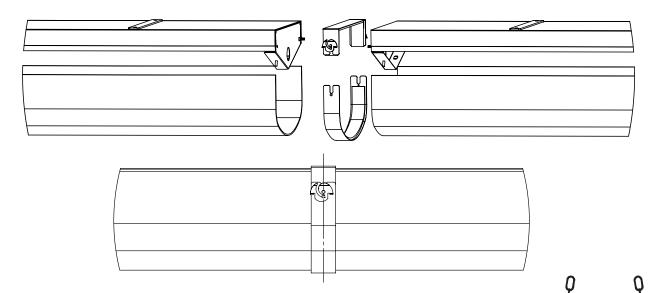

SC - CHAIN

- 1) Remove (1) threaded ring and (1) end cap on end opposite of wire entry. Install threaded plug into end opposite of the power entry side.
- 2) Grasp lens on open end of luminaire and remove from channel.
- 3) Remove reflector by removing (2) screws and disconnecting the LED array from the driver by way of quick disconnects or wire nuts and set reflector aside.
- 4) Mount (4) 1-1/2" spacing brackets to (4) mounting holes provided in back of luminaire. (See instructions in mounting kit.)
- 5) Insert "S" hooks into holes located on mounting brackets, hang from chain, close open end of "S" hooks.
- 6) When end wiring this luminaire, wire must pass through the threaded ring and end cap, prior to making electrical connections.
- 7) Reconnect LED array to driver by way of quick disconnects or wire nuts. Reattach and secure reflector, lens, end cap, and threaded ring. Install bottom (curved) half of joiner band assembly making sure bottom half slides over top half when securing latch.

In-Row Chain Mounting: Use in row mounting instructions #4, #6, #7, #8, #9, and #10 as required.

Cleaning Instructions: Wipe luminaire with a soft cloth slightly dampened with warm, soapy water. On stainless steel units, tightly adhering deposits may be removed by using a stainless steel polishing powder. Never use steel wool or steel brushes on stainless steel. Always rub in the direction of the polish lines.

Mounting and electrical hardware not supplied by Paramount Industries unless otherwise noted.

iiPMC

JL-AB-032625